

Important Information



NOTES: TO AVOID ELECTRIC SHOCK, PLEASE DON'T OPEN THE MACHINE CASING. THIS PRODUCT EXCLUDES USER-REPAIRABLE COMPONENTS. PLEASE HAVE THIS PRODUCT REPAIRED BY A PROFESSIONAL.



The triangular arrow-headed lightning flash icon signifies that inside the product, there is uninsulated "dangerous voltage", which readily causes electric shock.



The triangular icon with an exclamation mark purports to remind users that important operating and maintenance (repair) instructions are hereby introduced.

CAUTION:

TO AVOID FIRE OR ELECTRIC SHOCK, PLEASE DON'T EXPOSE THIS PRODUCT TO RAIN OR HUMID ENVIRONMENT. INSIDE THE PRODUCT, HIGH VOLTAGE EXISTS. DON'T OPEN THE CASING. PLEASE HAVE THE PRODUCT MAINTAINED BY A PROFESSIONAL.

AVOID SPLASHING WATER ON THIS PRODUCT. DON'T PLACE ANY OBJECT CONTAINING LIQUID (E.G. VASE) ON THIS PRODUCT.


NOTES:

INCORRECT BATTERY INSTALLATION MIGHT CAUSE EXPLOSION HAZARDS. IDENTICAL OR SIMILAR TYPES OF BATTERIES MUST BE USED.

THIS PRODUCT USES LASER. YOUR FAILURE TO CONTROL OR ADJUST ACCORDING TO THIS MANUAL OR YOUR FAILURE TO OPERATE AS PER STEPS MIGHT CAUSE YOUR EXPOSURE TO RADIATION. PLEASE DON'T REMOVE THE COVER OR REPAIR THIS PRODUCT BY YOURSELF. THIS PRODUCT MUST BE REPAIRED BY A PROFESSIONAL ONLY.



Important Safety Instructions

1. Please carefully read the following instructions.
2. Follow these safety instructions.
3. Pay attention to all cautions.
4. Observe all reminders.
5. Please don't use this product near water.
6. Please clean this product with dry cloth.
7. Please don't block the vent. Please assemble this product according to the manufacturer's requirements.
8. Don't assemble this product near heat sources (e.g. heat sink, hot air outlet and stove) or other heating equipment (including power amplifier).
9. Please do use original plug. If pins are not matched with socket, please contact a technician for replacement.
10. Please avoid trampling on or extruding the power cord, especially plug, socket and outgoing parts of this product.
11. Please do use parts and accessories designated by the manufacturer.
12. Please don't put this product on an insecure cart, pedestal, tripod, support or workbench. Please be careful in using a cart, in order not to be injured for overturn of the cart or this product. 
13. When this product is used in case of thunderstorm or kept idle for a long period of time, please unplug the power cord.
14. Please have this product repaired by a professional when necessary. Once this product is damaged, for instance, its power cord or plug is damaged, liquid or foreign body enters the product, or this product is drenched with water or becomes damp or the product cannot work normally or it falls off, repair must be performed. Don't expose batteries (battery packs or assembled batteries) to sunlight, fire sources or overheated environment.